



## Automation Library (AL) 1.2.4 installation


### Notes

1. Installing AL 1.2.4 will not remove previous versions of the AL 1.2.x.
2. Previous versions of Python will not be removed.
3. In order to use the new AL 1.2.4, you must modify your scripts (see article for migrating scripts)
4. If you choose to not install Python 3.7.1, then the AL will be installed in the newest version of Python 3.x on your computer
5. AL 1.2.4 will get installed as a site package that is part of your Python installation, example path for Python 3.7 would look like:


`C:\Program Files\Python37\Lib\site-packages\mhrc\`

### Installation


1. Unzip the AutomationLibrary\_Installer.zip

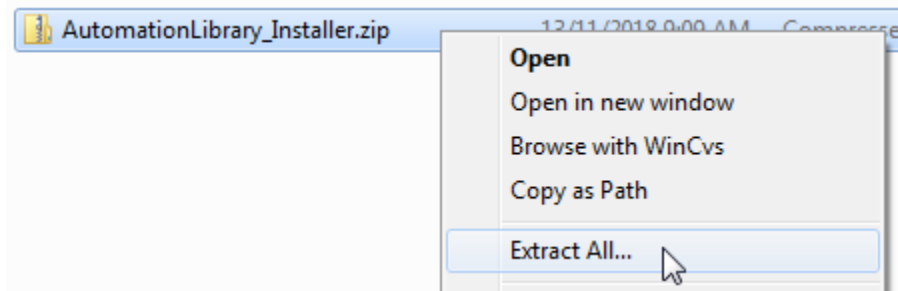


2. Double click on the Installer.exe

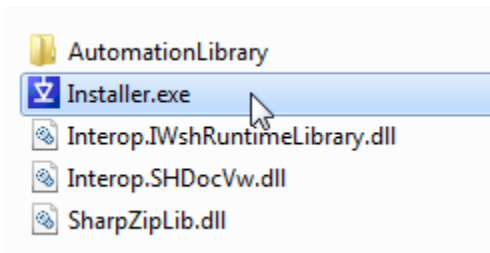


3. Click Yes to Install Python 3.7.1

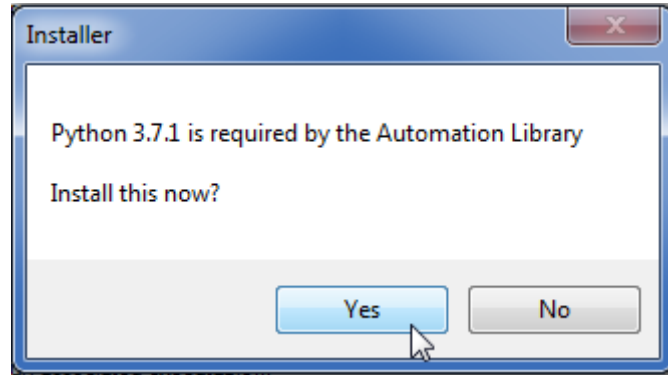


4. Click Yes to InstallPywin32-244.

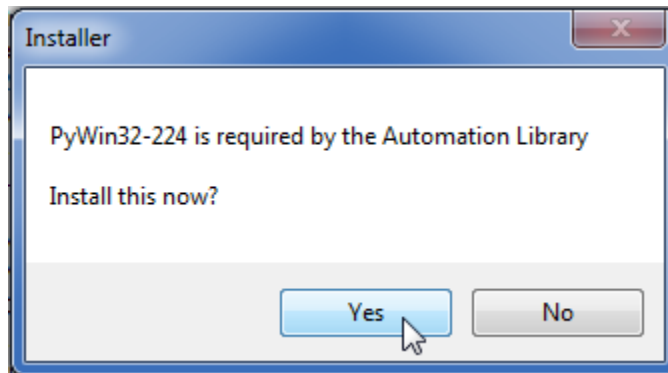

5. Click Yes to install the PSCAD AL.

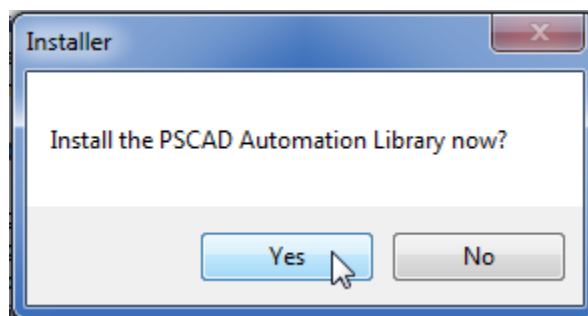

6. The Fortran Medic should automatically run to finish setup.

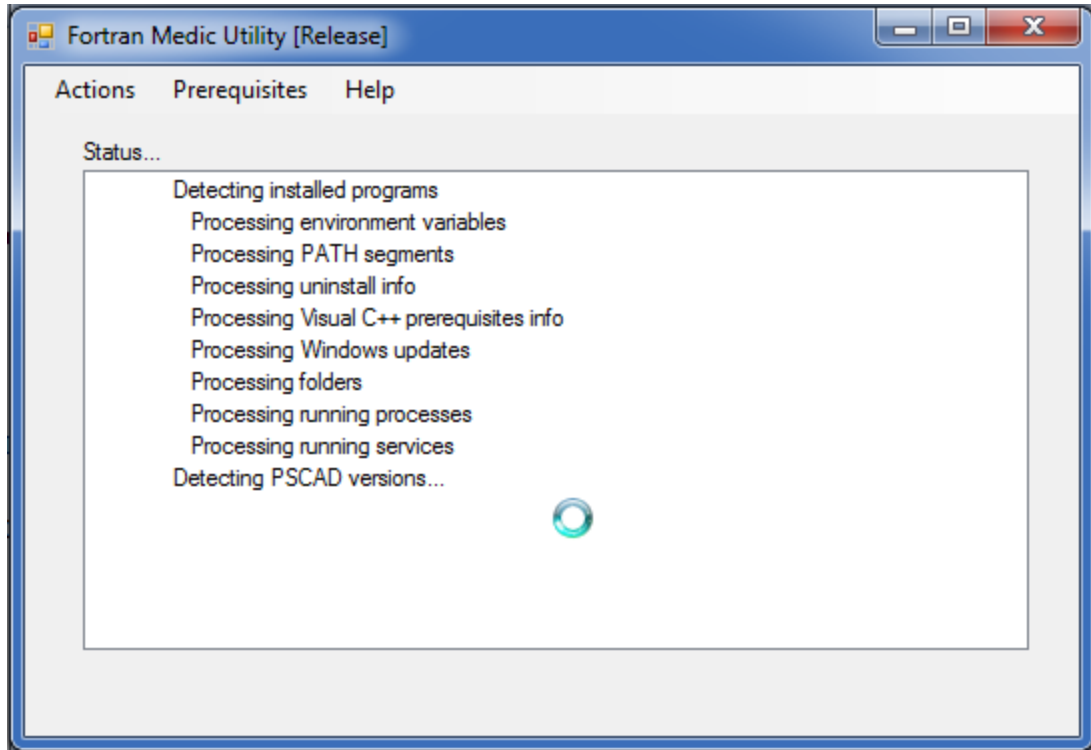

7. Setup is complete.

